


Comfort Anti-fatigue

→ ANTI-FATIGUE • INDOOR

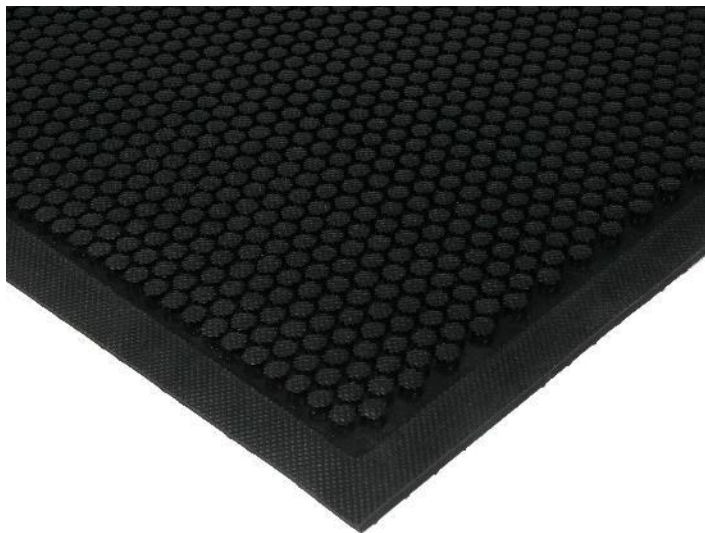

407 22 26 82 55

www.mhservices.ro

→ WHY CHOOSE THIS MAT?

The anti-fatigue mat concept is specially designed for safety, comfort and protection in areas where people stand for prolonged periods.

- Manufactured from **premium quality rubber**
- **Water resistant, resilient to impact and easy to clean** on site by hosing or through industrial laundry process
- **Impervious** to chemicals and oil based products
- **Reduces leg fatigue and noise**
- **Smart trade off** between support and thickness
- **Anti-static** properties



→ SPECIFICATIONS

Material	<ul style="list-style-type: none">• High density, closed-cell Nitrile
Backing	<ul style="list-style-type: none">• Flat
Other properties	<ul style="list-style-type: none">• Thickness: 8.5 mm• Weight: 3,1 kg/m²
Safety	<ul style="list-style-type: none">• Static Control: Antistatic & Static Dissipative• Flammability: ISO 13501: Rated Ef
Colour	Black
Recommended use	Recommended for indoor use in wet or dry commercial or industrial environments including but not limited to commercial kitchens, restaurants, cafeterias, bars, food processing facilities, restrooms, and hospital scrub stations.

→ STANDARD SIZES

60 x 84 84 x 139 84 x 279 119 x 178

Size Tolerance: +/- 5%

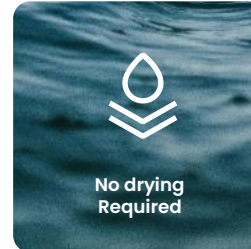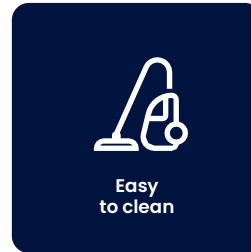

→ CLEANING INSTRUCTIONS

Comfort Anti-fatigue mats can be cleaned in two different ways:

1. Commercially laundered (see Laundering Instructions)
2. Washed by hand using the following instructions: Scrub with a deck brush (as needed), using a detergent with a neutral pH; rinse with a hose or pressure washer

Hang to dry. Always make sure the mat is dry before placing it back in service.

→ LAUNDERING INSTRUCTIONS

The formula below does not require extensive mechanical action or drying. The formula is designed to dissolve grease residue by using hot water to emulsify oils and grease.

1. Flush 2-3 minutes, high water level, cold water
2. Break 5-10 minutes, high water level, 140° F (60° C)
3. Rinse 2 minutes, high water level, cold water
4. Rinse 2 minutes, high water level, cold water
5. Drain 2 minutes

Comfort Anti-fatigue mats do not require extracting or drying. Lay mats flat following removal from the washer. Allow cooling before rolling.